


SkyWave DX500

TELSTAR

www.telstar-electronics.com

Mobile RF Linear Amplifier

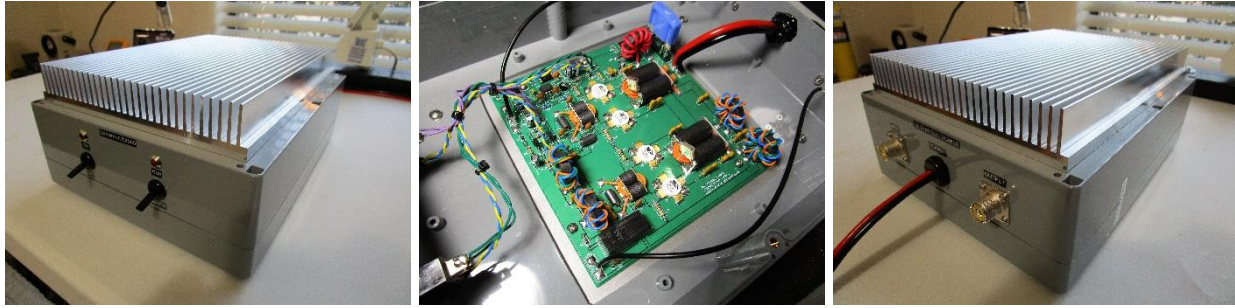

Features

- High Reliability Design
- +13.8V_{DC} Operation
- All Mode (AM, FM, SSB)
- 10-Meter Amateur Band Coverage
- Temperature Tracking Class-AB Bias
- High Output Power / Low Harmonic Content
- Quad MRF454 Configuration with Matched Transistors
- Carrier Operated or Manual¹ Transmit / Receive Switching
- Continuous Reverse Voltage Protection without Damage to Amplifier or Fuse
- Thermal Shutdown
- Fuse Protected
- Selectable SSB Delay
- Power & Transmit Indicators
- Low Stand-By Power Consumption
- High Temperature Teflon[®] Wire & Coaxial Cable
- Rugged Gray ABS Chassis – UL94HB Rated
- Premium Components & Printed Circuit Board

¹ Contact Telstar Electronics for details on this feature.

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.

SkyWave DX500



Mobile RF Linear Amplifier

Installation / Operating Instructions

1. Find a suitable place for the amplifier to reside in the system. Avoid areas that are confined and could reduce proper convection airflow around the heat sink. This will cause overheating and can result in premature failure of the amplifier.

IMPORTANT – *The amplifier should always be orientated in the vehicle so the heat sink faces upward for maximum convection cooling. Make certain the heat sink doesn't have objects touching it and is unobstructed to upward airflow.*

2. Connect the power wires to a source capable of delivering 13.8 V_{DC} @ 50A with red being positive, Black negative (ground). The following are recommendations as to the gauge of wire used to supply from the source for various lengths.

NOTE - The further the amplifier is from the power source, the larger the cross-sectional area of the wire needs to be. It's important to note that in many installations, the Black (negative) wire can be short and connected locally to the chassis of the vehicle, providing it presents a "vehicle ground".

Length (Feet)	Recommended Wire Type
1-10	AWG #10 Stranded
10-20	AWG #8 Stranded
20+	AWG #6 Stranded

3. Attach a 50-Ohm impedance coaxial cable from transceiver to INPUT connector on amplifier.
4. Attach a 50-Ohm impedance coaxial cable from the OUTPUT to the antenna system.

IMPORTANT - *Make certain the antenna system has a VSWR of 1.5:1 or less and is capable of handling up to 500W RMS.*

5. Move the ON/OFF switch on the front panel to the ON position to engage amplifier.

NOTE - With the switch in the OFF position the input and output of the amplifier are coupled together, effectively making the amplifier transparent to the system.

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.

SkyWave DX500



www.telstar-electronics.com

Mobile RF Linear Amplifier

6. Move the AM/FM/SSB mode switch to the proper position for the mode you will be operating.

NOTE - This completes the installation. You are now ready to operate...

7. Key the AM/FM transmitter and speak normally into the microphone. The red LED indicator above the AM/FM/SSB switch should illuminate, showing the amplifier has changed to the transmit mode. When the radio goes back into the receive mode, the LED indicator will turn off.

NOTE – The transmit indicator LED will operate somewhat different when transmitting SSB signals. This is due to the lack of RF carrier supplied by the radio when no audio is present at the radio microphone.

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.

Telstar Electronics
SkyWave DX500 Revision "C"
Last Revised - 10/14/2018 1:51 PM

SkyWave DX500



Mobile RF Linear Amplifier

Troubleshooting

Symptom	Possible Cause	Possible Solution
Unit inoperative. (Power LED indicator doesn't illuminate.)	Poor connection of power wires.	Check power wire connections.
	Power wires connected backward.	Check power wire polarity.
	Internal fuse blown.	Remove bottom cover ² and check fuse integrity.
	Power source inoperative.	Check power source integrity.
Unit inoperative. (Power LED indicator is illuminated.)	No RF drive.	Check integrity of input coaxial cable.
	Insufficient RF input drive.	Check transmitter for minimum drive requirement. See " Electrical Specifications " for minimum RF drive.
Internal relay chatters during transmit.	AM/FM/SSB mode switch in wrong position for SSB operation.	Select proper transmitting mode.
	Insufficient RF input drive.	See " Electrical Specifications " for minimum RF drive.
	Inadequate power source.	See " Electrical Specifications " for current requirements.
No output.	Input & output coaxial cables reversed.	Check for proper coaxial cable orientation & attachment.

² If the unit is still under the 90-day warranty period, removing the bottom cover will void warranty. Contact Telstar Electronics for return authorization.

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.

SkyWave DX500

TELSTAR

www.telstar-electronics.com

Mobile RF Linear Amplifier

Electrical Specifications

Parameter	Conditions/Notes	Value
Operating Modes	-	AM, FM, SSB
Voltage Requirements	Typical	+13.8V _{DC}
	Maximum	+16V _{DC}
DC Current	-	45A Maximum
RF Input Power	Minimum	500mW (AM, FM)
	Maximum	15W-RMS (AM, FM) 60W-PEP (SSB)
RF Power Output	@1dB Compression	350W-RMS (AM/FM) 475W-PEP (SSB)
2nd Harmonic	100W CW@28MHz (Typical)	-30dBc ³
3rd Harmonic	100W CW@28MHz (Typical)	-40dBc
Input / Output Impedance ⁴	-	50-Ohms
Input / Output Connectors	-	SO-239
Input SWR ⁵	Typical	1.3:1
Power Gain	Typical	15dB @ 28MHz
Bandwidth	0.5dB Flatness	26-30MHz
Class-AB Bias Current	-25°C to 100°C Heat Sink Temperature	400mA +/-30mA
Fuse	ATO - Automotive Type	60 Ampere
SSB Relay Dropout Delay	Typical	1.0 Second
Stand-By Power	Typical	150mW
Reverse Voltage Protection	No Damage to Amplifier or Fuse	Continuous
Thermal Shutdown	Heat Sink Temperature	~120°C
Chassis	UL 94HB Rated	Rugged Gray ABS Plastic
Printed Circuit Board	Solder Mask & Silkscreen	Premium FR4 Material
Weight	-	8.5 Pounds

³ Decibels below carrier.

⁴ An antenna system in excess of an SWR of 1.5:1 can cause damage to amplifier power transistors.

⁵ Standing Wave Ratio.

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.



SkyWave DX500



www.telstar-electronics.com

Mobile RF Linear Amplifier

RF Performance

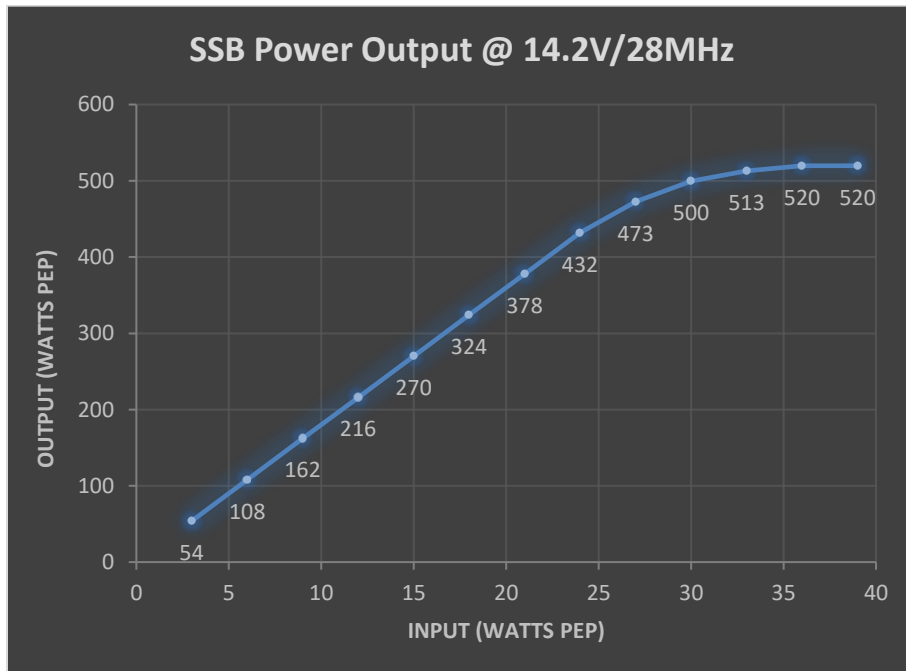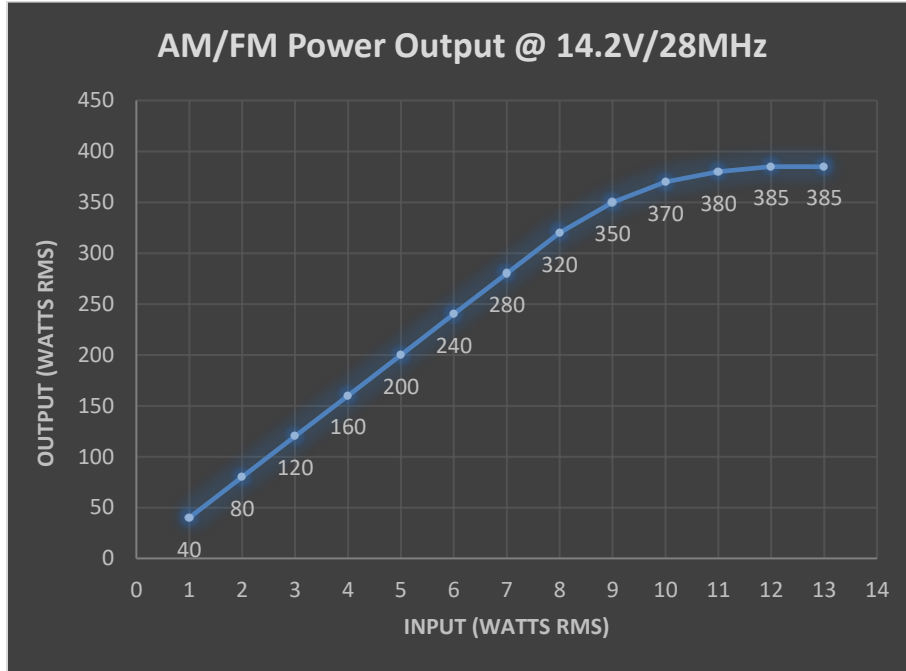

The SkyWave DX500 has an implied warranty to be free of defects in materials and workmanship for a period of 90 days from purchase. This warranty covers workmanship, parts (excluding power transistors), and labor. If it's determined that the amplifier has been used for a purpose other than intended, abused, or altered in any way, the warranty shall be void. Specifications subject to change without notice.

Telstar Electronics
SkyWave DX500 Revision "C"
Last Revised - 10/14/2018 1:51 PM